

Menu: A0,F0,55,FF,4E,B1
 Right: A0,F0,55,FF,05,FA
 OK: A0,F0,55,FF,02,FD
 Down: A0,F0,55,FF,0D,F2
 Up: A0,F0,55,FF,17,E8
 Left: A0,F0,55,FF,0C,F3
 Source: A0,F0,55,FF,01,FE
 Exit: A0,F0,55,FF,1B,E4
 Power On: A0,F0,55,FF,AE,51
 Power Off: A0,F0,55,FF,AD,52
 Power On/Off: A0,F0,55,FF,0B,F4
 Volume +: A0,F0,55,FF,0A,F5
 Volume -: A0,F0,55,FF,40,BF

Mute: A0,F0,55,FF,14,EB
 Sleep: A0,F0,55,FF,53,AC
 AV: A0,F0,55,FF,ED,12
 VGA: A0,F0,55,FF,EA,15
 HDMI Toggle: A0,F0,55,FF,EC,13
 HDMI1: A0,F0,55,FF,DE,21
 HDMI2: A0,F0,55,FF,DF,20
 HDMI3: A0,F0,55,FF,E0,1F
 Component: A0,F0,55,FF,E7,18
 USB: A0,F0,55,FF,57,A8
 PMODE: A0,F0,55,FF,4B,B4
 Zoom: A0,F0,55,FF,51,AE
 Surround: A0,F0,55,FF,C7,38
 SMODE: A0,F0,55,FF,5B,A4
 VOL 25%: A0,F0,55,FF,21,DE
 VOL 50%: A0,F0,55,FF,22,DD
 VOL 75%: A0,F0,55,FF,23,DC
 VOL 100%: A0,F0,55,FF,24,DB
 Brightness 25%: A0,F0,55,FF,26,D9
 Brightness 50%: A0,F0,55,FF,27,D8
 Brightness 75%: A0,F0,55,FF,28,D7
 Brightness 100%: A0,F0,55,FF,29,D6

COM Settings

Baud Rate:	38400
Data Bits:	8
Parity:	None
Stop Bits:	1